

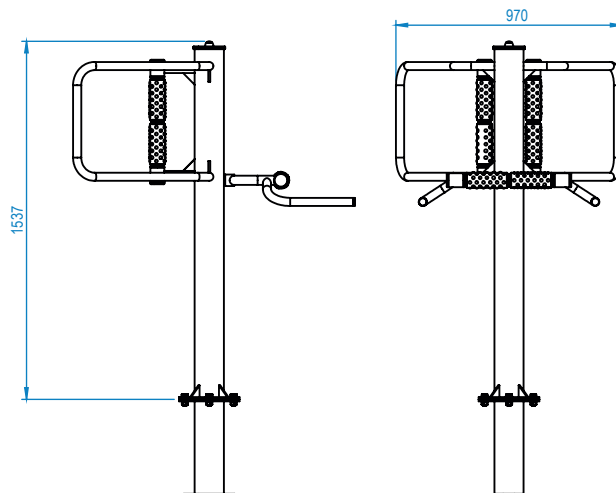



TRENINGSSAPPARAT MASSASJE

G2606

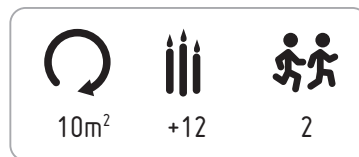

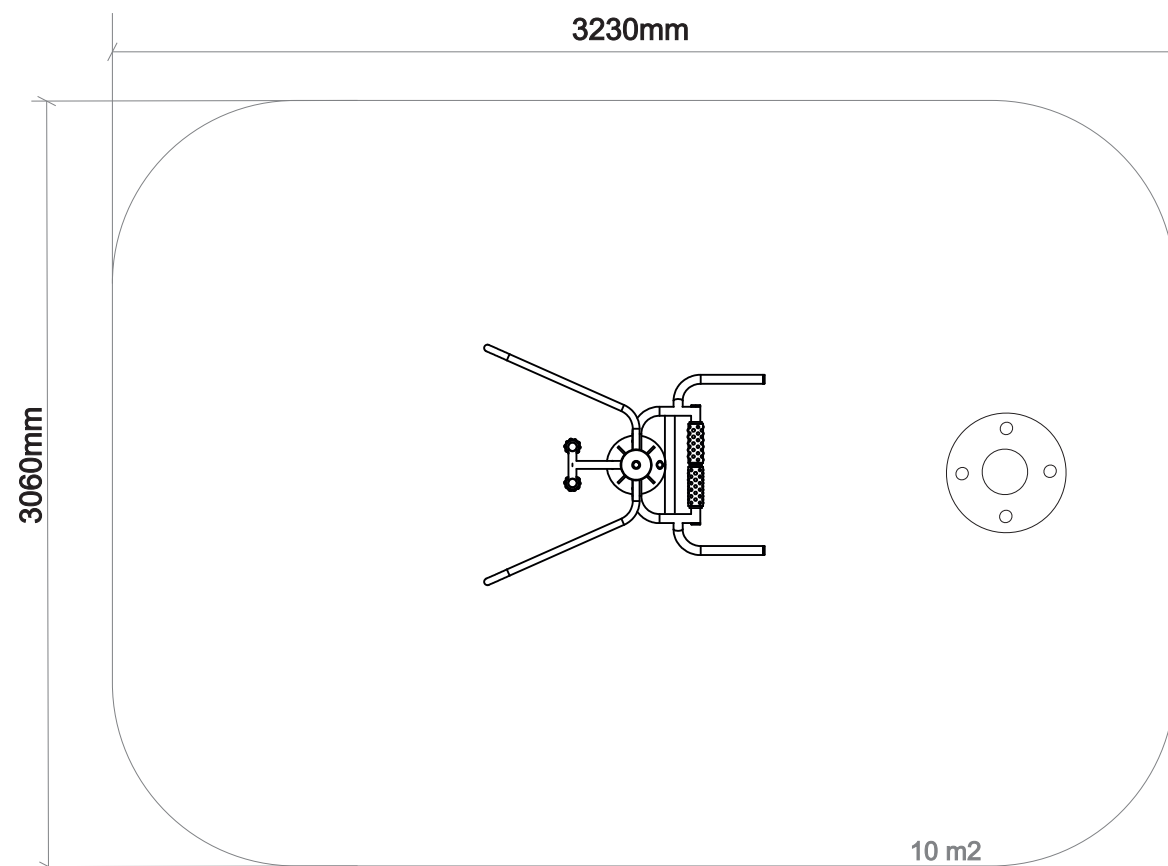

MÚSCULOS PARA DESENVOLVER / MÚSCULOS PARA DESARROLLAR / MUSCLES TO DEVELOP / MUSCLES À DÉVELOPPER

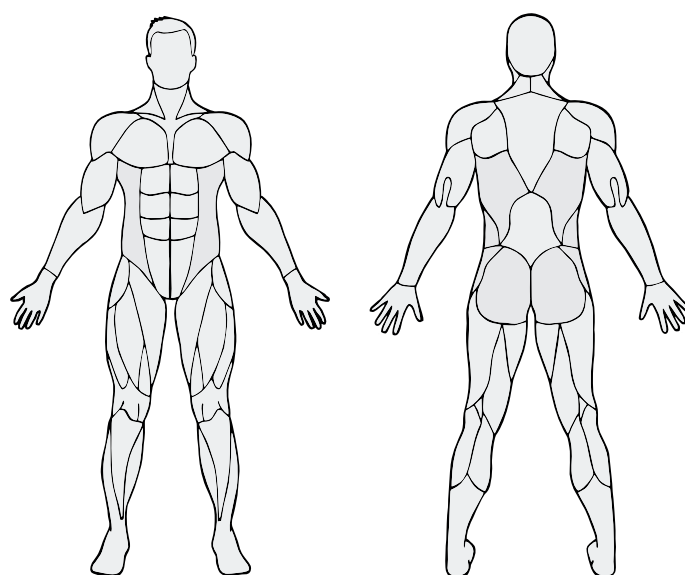



(very resistant to corrosion, wear and vandalism) Structure


polyethylene Plastic parts

electro-galvanized steel Metal parts

Bearings: SKF stiff balls with a reinforced stroke on both sides (no maintenance and lubrication required);

Finishing
electroplated and lacquered (or gel type enamel at 230°C, with thickness between 70µm according to the norm UNE EN ISO2808) to 2600 Sablé (on request can be lacquered to another RAL);

Type of attachment
provided by 1 negative;

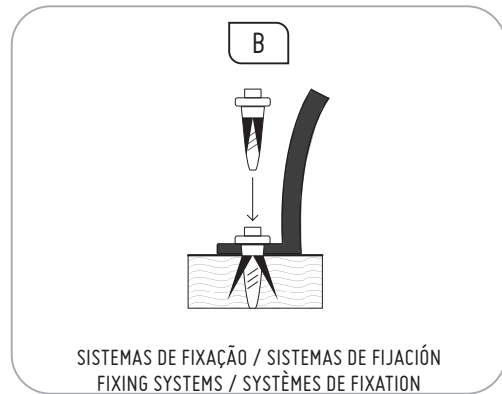

PLANO DE MANUTENÇÃO / PLAN DE MANTENIMIENTO / MAINTENANCE PLAN / PLAN DE MAINTENANCE


Weekly: visually check the overall status of the game, ensuring there are no breaks or damage to users;

Monthly: Check that the joints have a uniform movement. Lubricate if appropriate. ensure that the structural stability of the game is the same as the first day. check the condition of all bolts and their protections;

Annually: check for corrosion on metal parts. Check all foundations;



MODO DE EXECUÇÃO / MODO DE EJECUCIÓN / MODE OF EXECUTION / MODE D'EXÉCUTION

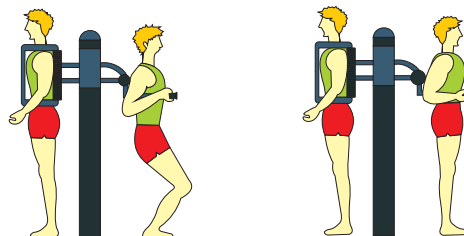

Objective: Relax the muscular tension of the waist and the back

Method of execution: Place the back on the massage column and make a slow, vertical and horizontal movement.

Prescription: Always depending on the needs of the person, there is no specification for this device.

Caution: Consult your doctor before performing these exercises.
Children must be supervised by an adult.